
TYPICAL AIR INSTALLATIONS

LS-8 SERIES

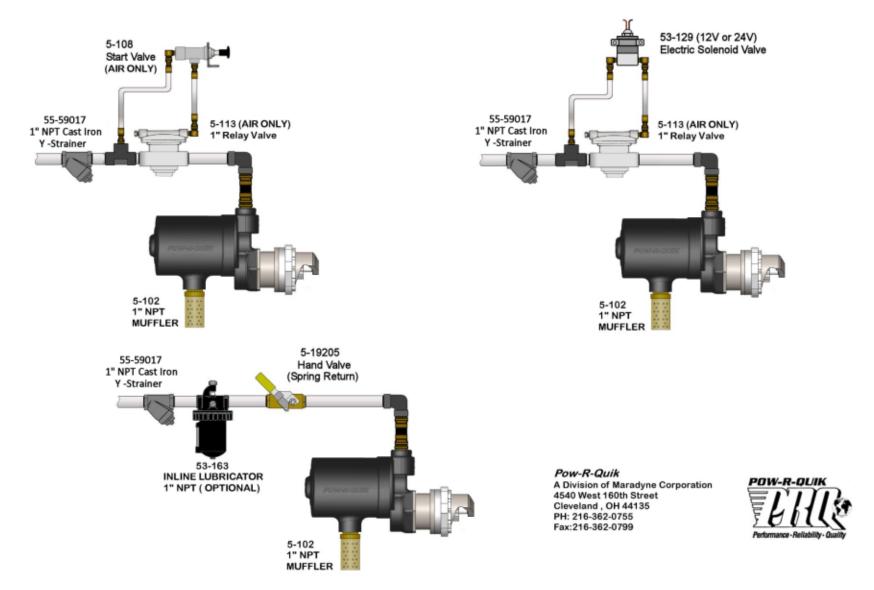

WARNING: Penetrating oil attack rotor vanes and cause motor failure. USE DIESEL FUEL OR SAE#10 NON-DETERGENT LUBE OIL ONLY.

LS series can be operated without lubrication for short crank cycles only. Should crank cycles exceed ten (10) seconds, lubrication must be provided to the air starter. It is recommended that lubrication is provided on all starters used in natural gas applications. Recommended drip rate: 15 drops per minute.